

⚠ WARNING — PRESSURE RELEASE REQUIRED BEFORE FILTER REPLACEMENT

Regular maintenance and timely filter replacement are essential for maintaining optimal water quality, filtration efficiency, and long-term system reliability.

For best performance:

- Replace filters according to the recommended service intervals.
- Perform filter reset procedures after each replacement.
- Flush the system after installing new filters.
- Ensure the system is operated within the recommended water pressure and environmental conditions.

Filter Replacement Procedure

Step 1 — Shut Off Water Supply

Turn the water supply tee valve switch to the OFF position.

Step 2 — Release System Pressure

Open the faucet and let the water run until it stops completely to release the internal pressure.

Step 3 — Remove the Front Cover

Lift and remove the magnetic front cover.

Step 4 — Remove the Used Filter

Rotate the filter counter-clockwise from 12 o'clock to 9 o'clock position, then pull it out.

Step 5 — Clean the Filter Area

Wipe away any remaining water inside the filter cavity using a dry clean towel.

Step 6 — Install the New Filter

Insert the new filter by aligning the arrow at the 9 o'clock position, then rotate clockwise to 12 o'clock position until locked. **DO NOT** over turn by force.



Step 7 — Reinstall the Front Cover

Place the magnetic front cover back onto the system.

Step 8 — Restore Water Supply

Slowly turn on the water supply to prevent water-hammer damage to the cartridge. Once the flow has stabilized, fully open the valve.

Step 9 — Rinse Before Use

Turn on the faucet and let the water run for about one minute to flush out any loose carbon granules before consuming the water.

